



iPhone 6s Plus Volume Control Button Covers Replacement

Replace the volume control button covers in your iPhone 6s Plus.

Written By: Dante Mazzanti



INTRODUCTION

Follow the steps in this guide to replace the volume control button covers in your iPhone 6s Plus.

You can also use this guide to replace the **volume button bracket** and the **mute switch bracket**, both removed in [this step](#).



TOOLS:

- [P2 Pentalobe Screwdriver iPhone](#) (1)
- [Suction Handle](#) (1)
- [Spudger](#) (1)
- [Tweezers](#) (1)
- [Phillips #000 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)




PARTS:

- [iPhone 6s Plus Volume Button Bracket](#) (1)
- [iPhone 6s Plus Mute Switch Bracket](#) (1)
- [iPhone 6 Plus/6s Plus/7 Plus Battery Adhesive Strips](#) (1)

Step 1 — Pentalobe Screws




 Before disassembling your iPhone, discharge the battery below 25%. A charged lithium-ion battery can catch fire and/or explode if accidentally punctured.

- Power off your iPhone before beginning disassembly.
- Remove the two 3.4 mm Pentalobe screws on either side of the Lightning port.

Step 2 — Opening Procedure




 Opening the display on the 6s Plus separates a thin strip of adhesive around the perimeter of the display. If you prefer to replace the adhesive, have a set of new adhesive strips ready before you continue. It's possible to complete the repair without replacing the adhesive, and you probably won't notice any difference in functionality.

- Apply a suction cup to the lower left corner of the display assembly.

Step 3



- Pull up on the suction cup with firm, constant pressure to create a slight gap between the front panel and rear case.

 Pulling too hard may damage the display assembly. Apply just enough pressure to create a small gap between the display assembly and the rear case.

Step 4



- The safest place to pry from is the notch in the front panel above the headphone jack.
- While still maintaining pressure on the suction cup, insert the flat tip of a spudger into the gap, directly above the headphone jack.

Step 5



- Twist the spudger to widen the gap between the front panel and the rear case.

Step 6



- While firmly pulling up on the suction cup, slide the edge of the spudger under the bottom left corner of the display.

Step 7



- Slide the tip of the spudger up the left side of the phone, between the front panel and the rear case.

Step 8



- Insert the flat tip of the spudger under the right edge of the display.
- Slide the spudger up the right side.

Step 9



- Use a plastic opening tool to hold down the rear case while pulling up the suction cup to open the phone.

⚠ Do **not** remove the display completely, or you will damage the data cables connecting the display near the top edge of the iPhone.

Step 10



- Pull up on the small nub on the suction cup to remove it from the display.

Step 11



- Gently grasp the display assembly and lift it up to open the phone, using the clips at the top of the front panel as a hinge.
- Open the display to about a 90° angle, and lean it against something to keep it propped up while you're working on the phone.
- ⚠ Don't open the display more than 90°—it is still connected to the top of the phone by the display, digitizer, and front camera cables which can tear easily.
- Add a rubber band to keep the display securely in place while you work. This prevents undue strain on the display cables.
- ⓘ In a pinch, you can use an unopened canned beverage to support the display.

Step 12 — Battery Connector




- Remove the following Phillips screws securing the battery connector bracket to the logic board:
 - One 2.9 mm screw
 - One 2.3 mm screw

Step 13



- Remove the battery connector bracket.

Step 14

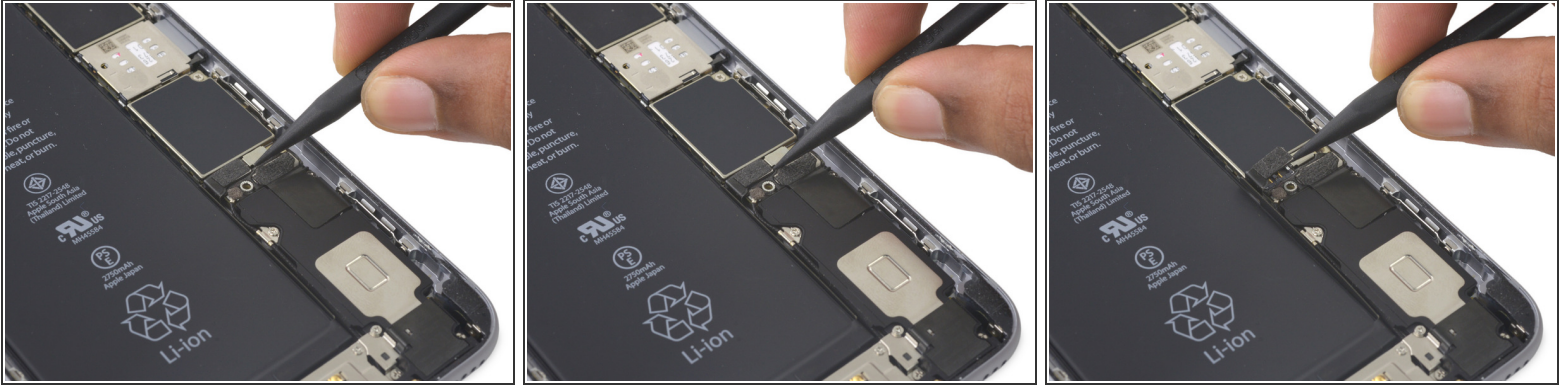

- Use the pointed tip of the spudger to disconnect the battery connector from the logic board.

Step 15



- Bend the connector back to ensure it doesn't make contact and power the iPhone on while you're working on it.

Step 16 — Display Assembly



- Remove the following Phillips screws:
 - Three 1.3 mm screws
 - One 1.6 mm screw
 - One 3.0 mm screw
- ☑ During reassembly, it's critical to place this 3.0 mm screw in the top-right corner of the bracket. Placing it anywhere else may damage the logic board.


Step 17



- Remove the display cable bracket.

Step 18



 Be careful to only pry up on the connector itself and not the socket on the logic board.

- Use a plastic opening tool to disconnect the front-facing camera and sensor cable connector.



Step 19



- Use a plastic opening tool to disconnect the digitizer cable by prying it straight up from its socket on the logic board.


✦ When reconnecting the digitizer cable, **do not press the center of the connector**. Press one end of the connector, then press the opposite end. Pressing in the center of the connector can bend the component and cause digitizer damage.

Step 20

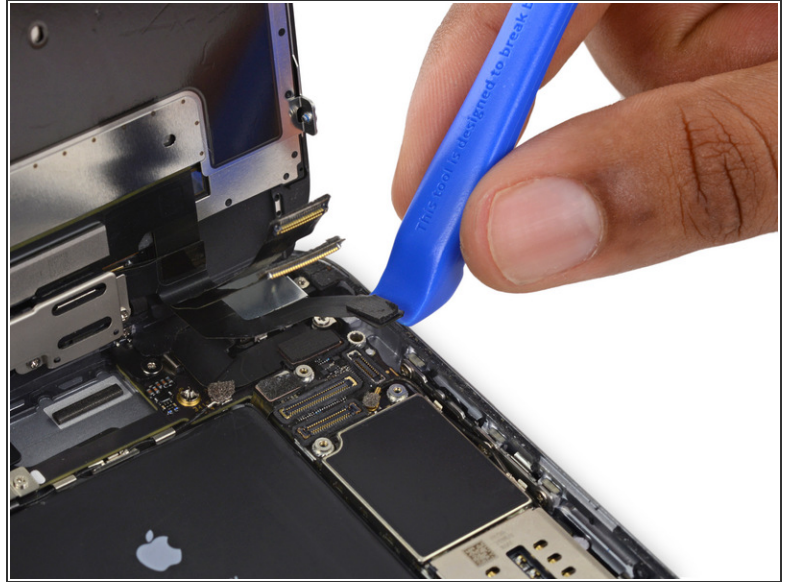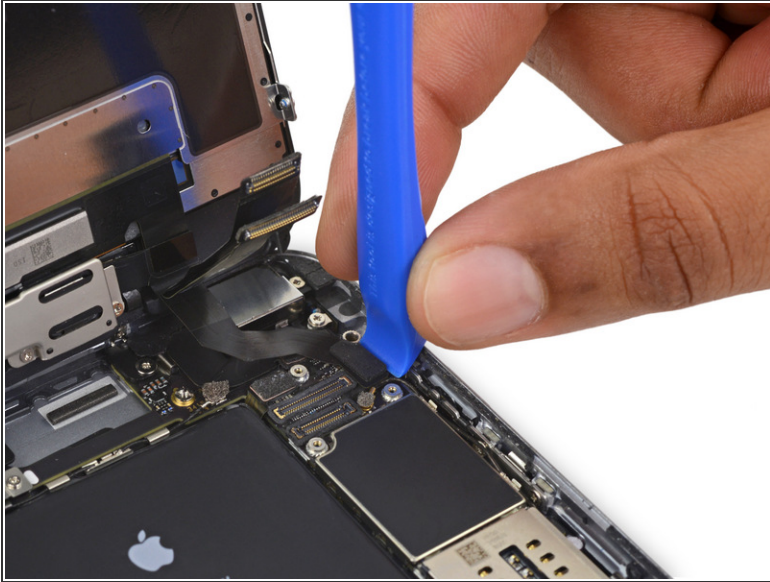

- Use a plastic opening tool to disconnect the display data cable by prying it straight up from its socket on the logic board.

Step 21

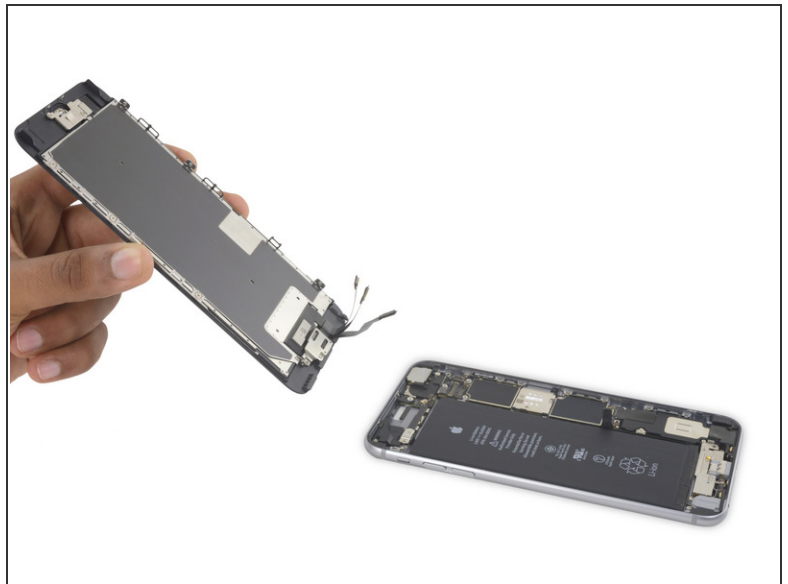

- Remove the display assembly.
- ☑ During reassembly, pause here if you wish to [replace the adhesive around the edges of the display](#).

Step 22 — Battery




- Peel back the tips of the three battery adhesive strips along the bottom edge of the battery.

Step 23



- Gather the ends of all three adhesive strips in your hand.
- ⚠ Try to keep the strips flat and unwrinkled during this procedure; wrinkled strips will stick together and break instead of pulling out cleanly.

Step 24

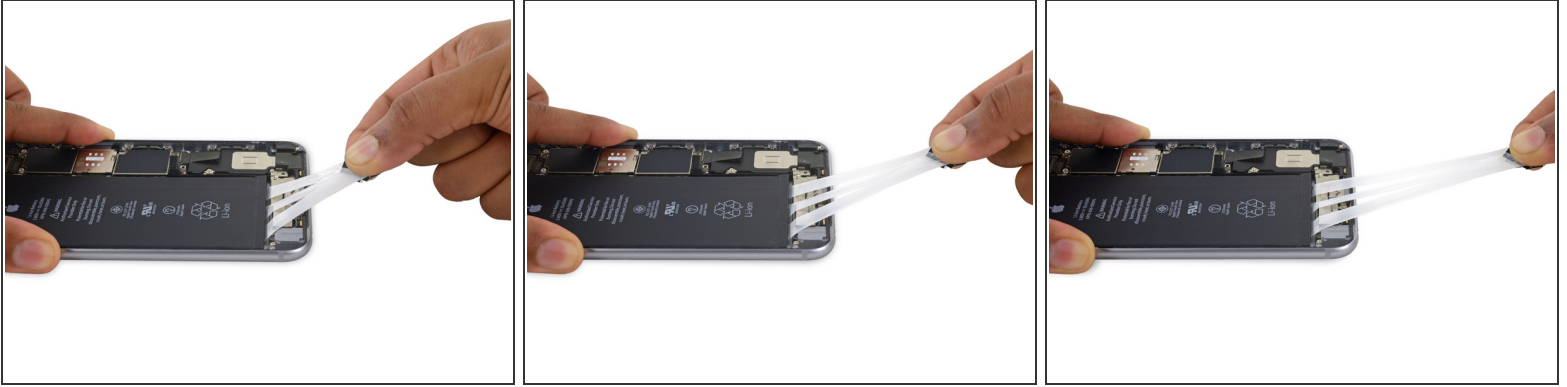

- Gently pull the battery adhesive tabs away from the battery, toward the bottom of the iPhone.

⚠ To avoid tearing the adhesive strip, be careful not to pull against the battery or lower components.

- Pull steadily, maintaining constant tension on the strips as they slip out from between the battery and the rear case. For best results, pull the strips at a 60° angle or less.

ⓘ The strips will stretch to *many* times their original length. Continue pulling and re-grab the strips near the battery if necessary.


⚠ Hold down the battery with one hand as you pull, or the elastic strips may fling the battery from the phone once they're separated from the rear case.

Step 25



- i** If you successfully removed all three adhesive strips, move on to the next step. Otherwise, you will need to pry the battery from the rear case.
- [Prepare an iOpener](#) and apply it to the back of the rear case, directly over the battery. Alternatively, you can apply heat using a heat gun or hair dryer.
 - After about a minute, flip the phone over and use a plastic card to break up any remaining adhesive behind the battery.
- ⚠** **Do not** insert your card in the area between the volume down (-) button and the top edge of the battery, or you may damage the volume control cable lying underneath.
- ⚠** **Do not** pry against the logic board or you may damage the phone.
- ⚠** Keep the card as flat as possible to avoid bending the battery, which may damage it and cause it to release dangerous chemicals or catch fire. Do not use any sharp tools to pry at the battery.
- i** Alternatively, a piece of dental floss may be used to separate the battery from the rear case. A stronger alternative to dental floss is an unwound guitar string, such as a 0.009 E string from a 12-string set.
- Thread the floss or string behind the upper battery corners, bring the ends together, wrap them around a folded cloth, and pull evenly.

Step 26

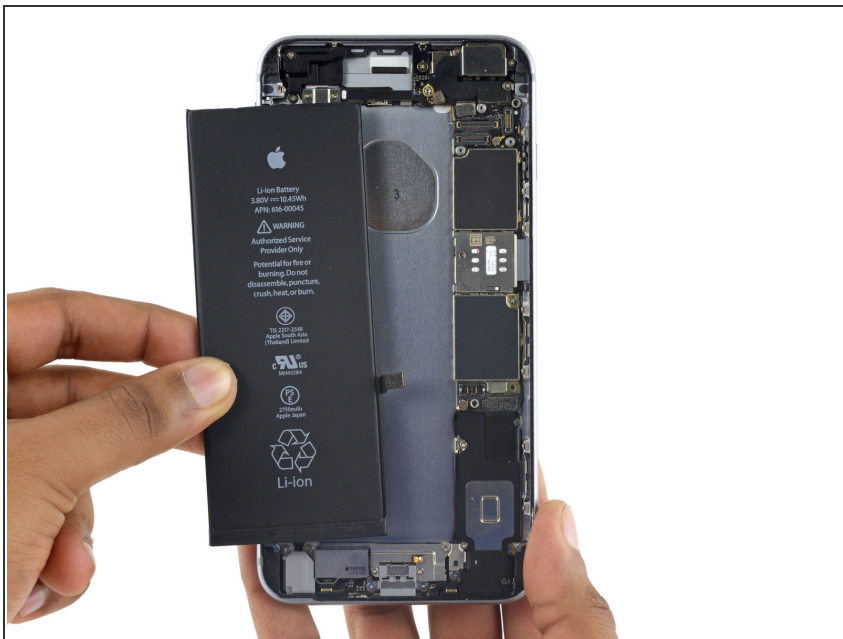


- Remove the battery.
- ✦ When installing the battery, refer to [this guide](#) to replace your battery's adhesive strips.
- ✦ Perform a [hard reset](#) after reassembly. This can prevent several issues and simplify troubleshooting.

Step 27 — Volume Control Cable



- Remove the two 2.7 mm Phillips screws over the audio control cable bracket.

Step 28

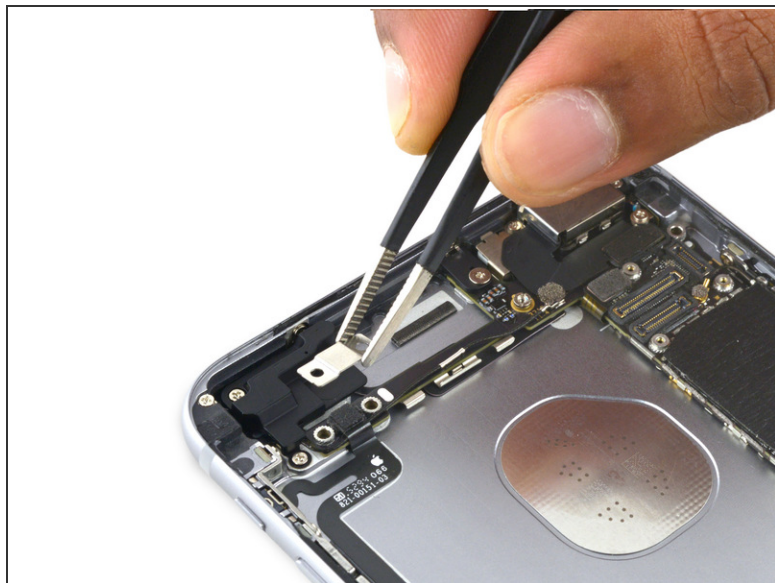

- Remove the audio control cable bracket.

Step 29




- Disconnect the audio control flex cable from its socket on the logic board.

Step 30



- Remove the circular sticker covering the third screw securing the cellular antenna to the rear case.

Step 31

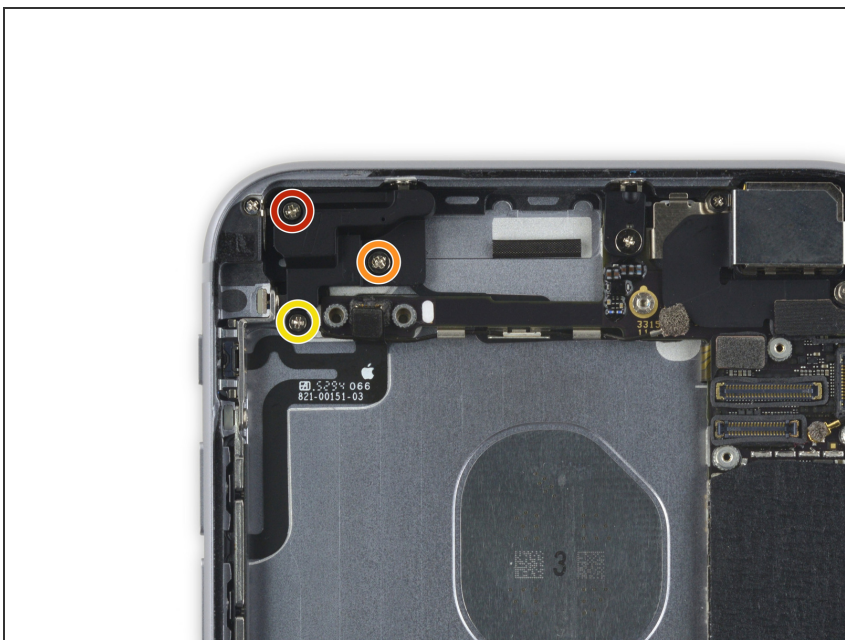


- Remove the following three Phillips screws:
 - One 2.7 mm screw
 - One 1.7 mm screw
 - One 1.3 mm screw

Step 32



- Lift, but do not remove, the cellular antenna to reveal the third screw securing the audio control cable to the rear case.

Step 33

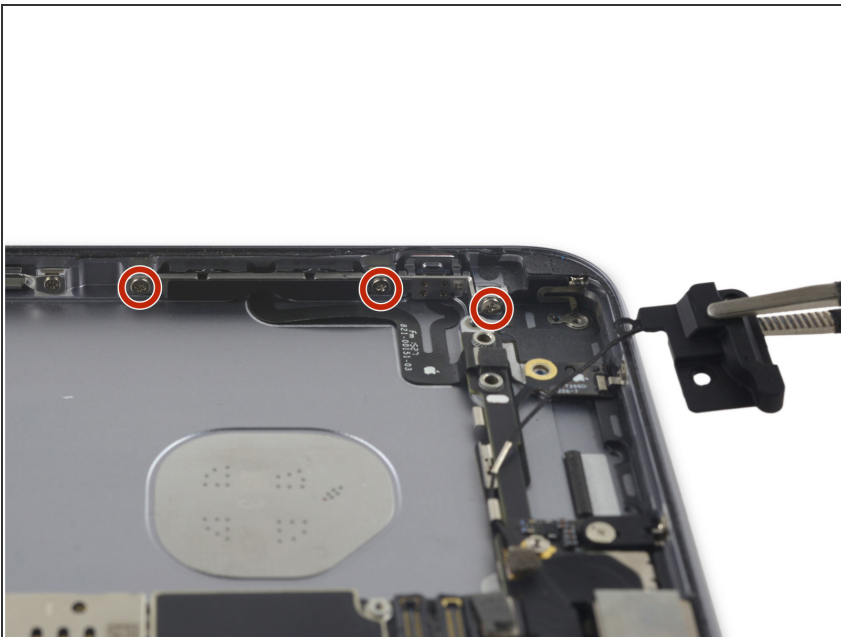

- Remove the three 2.4 mm Phillips screws over the audio control cable bracket.

Step 34




- Use the flat end of a spudger to peel the volume control flex cable off the rear case.

Step 35




- Remove the volume control flex cable.
- i** The cable assembly has two separate pieces connected by a ribbon cable—the volume control buttons and silent switch.

Step 36 — Volume Control Button Covers

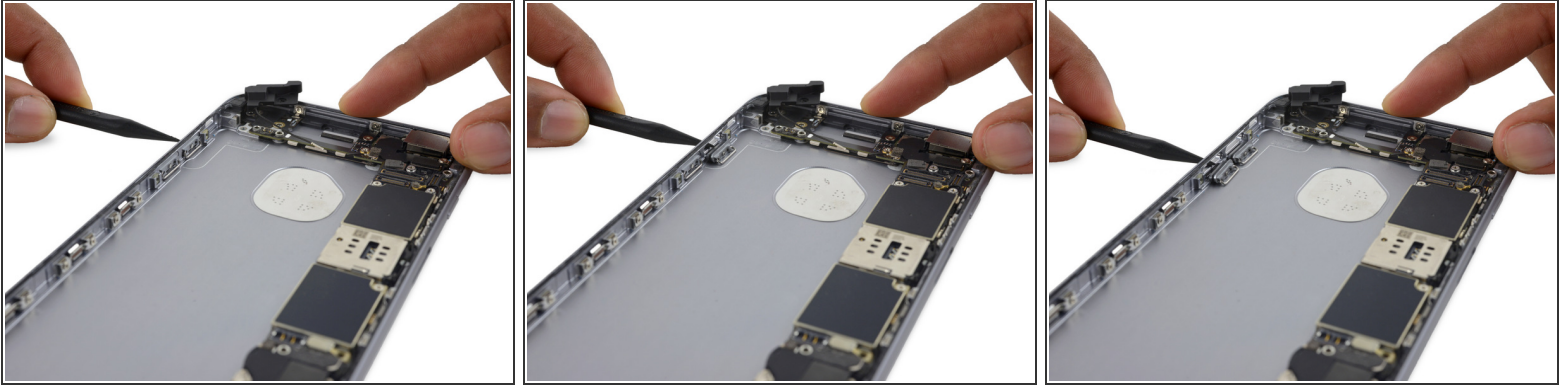

- Gently nudge the volume control button covers out of their slots in the rear case.

Step 37

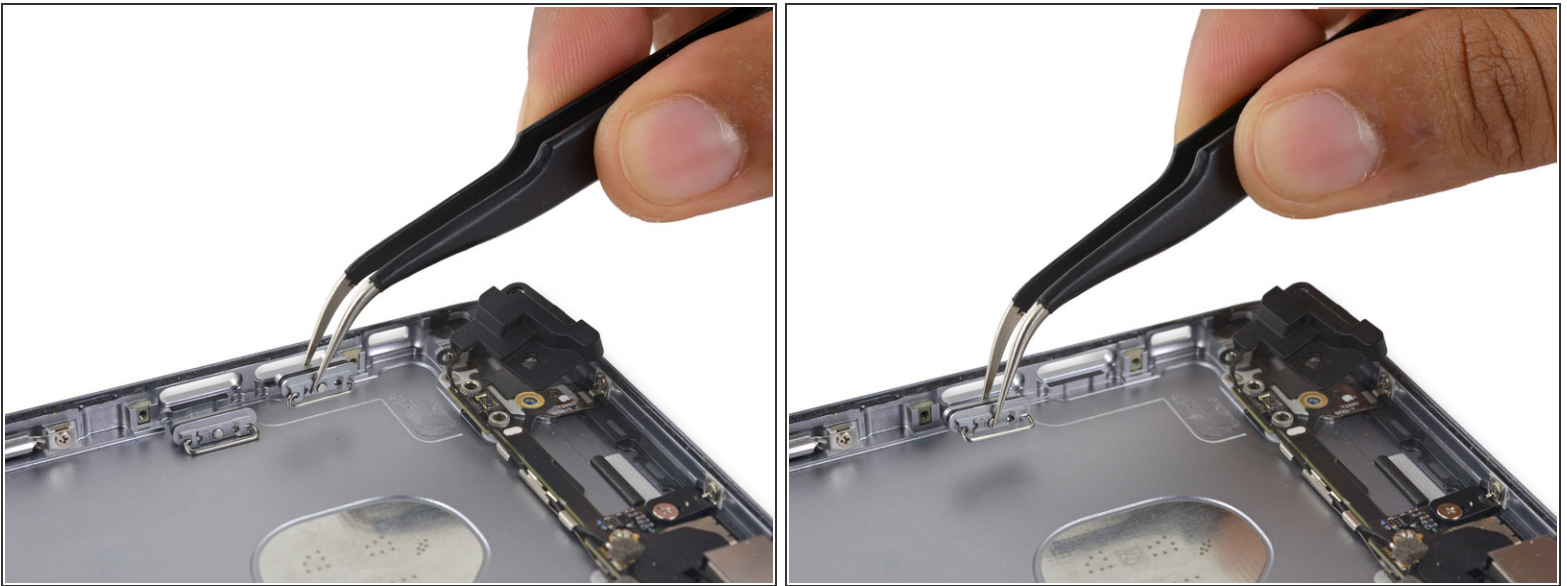

- Remove the two button covers.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-21 10:36:08 PM.